



User Manual

# LucidControl AO4

4 Channel Analog Output USB Module

# **1** Introduction

This document describes the functionality of the LucidControl AO4 USB module generating 4 analog voltages or currents controllable via Universal Serial Bus.

A basic description of the complete LucidControl product family can be found in the document *LucidControl User Manual*.

This document concentrates on the specific topics of the analog output module which is described here with all its details. In order to set up the module in a fast way please see the

#### LucidControl AO4 One Sheet Manual

which provides all information necessary to start working with the module out of the box without reading lots of documentation.

# 2 Hardware

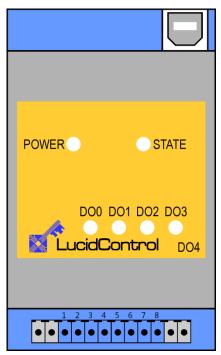


Fig. 1 Digital Output Module

Fig. 1 shows the sketch of the Analog Output AO4 module with 4 analog voltage or current outputs.

All LucidControl modules have two connectors, one USB connector and an IO-Connector which makes it easy to setup them.

While the upper USB connector is used for interconnection with the computer, the lower IO-Connector is used for inputs and outputs.

The IO Connector provides 8 terminals in total - two for each output.

The intended use of the analog output module is the generation of analog voltage and current signals. The module must only be used for the intended use.



For the analog output module it is explicitly stated that no potential of any external power source must be applied to any connector of the module. The modules must only be used within the specified conditions.

# 2.1 Configurations

LucidControl AO4 is available with the following output types:

	Tura Number	Output Voltage Range			
Module Type	Type Number	V <sub>Min</sub>	V <sub>Max</sub>		
Decitive	LCTR-AO4-5	0 V	5 V		
Positive Outputs	LCTR-AO4-10	0 V	10 V		
	LCTR-AO4-24	0 V	24 V		
Symmetrical Outputs	LCTR-AO4-12-S	-12 V	12 V		

Tab. 1 Output Voltage Range

	Turne Niumher	Output Vo	oltage Range	
Module Type	Type Number	<b>I<sub>Min</sub></b>	<b>I</b> Max	
Positive	LCTR-AO4-20M0	0 mA <sup>1)</sup>	20 mA	
Outputs	LCTR-AO4-20M4	4 mA	20 mA	

Tab. 2 Output Current Range

#### Note:

1) A minimum saturation current remains on the output. See I<sub>ChMin</sub> in specification.

### 2.2 Interface and Interconnection

# 2.2.1 USB Connection

LucidControl USB modules are connected to the computer by using a standard USB cable which must not extend a length of 5 m. They are "bus powered" which means that the host computer supplies the module with power.

LucidControl AO4 module is rated with a maximum current of 250 mA.

#### Note:

Supplying USB devices with power is not critical using a desktop computer or notebooks but it must be considered that the total power of one USB port is limited to 500 mA.

#### Note:

Using an active USB-Hub with its own power supply allows the connection of additional devices in the case that the host is not able to supply them.

# 2.2.2 IO Connection

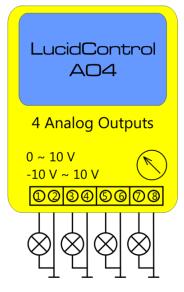


Fig. 2 shows the interconnection of the voltage output module in a typical application.

In this application the analog output voltages are sourcing LEDs.

The terminals 2, 4, 6 and 8 are internally connected to ground.

Fig. 2 Voltage Output Module Connection

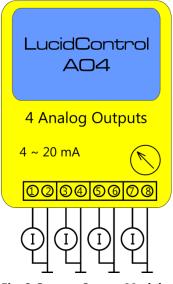


Fig. 3 shows the interconnection of the current output module. The outputs are connected to current measurement devices.

The terminals 2, 4, 6 and 8 are internally connected to ground.

Fig. 3 Current Output Module Connection



The load current per channel must not exceed  $I_{ChMax}$ . The sum of all 4 output channels must not exceed  $I_{TotalMax}$ .

### 2.2.2.1 4 Voltage Outputs

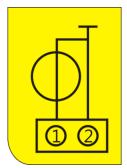


Fig. 4 Voltage Source

The voltage output module shown in Fig. 3 consists of 4 independent voltage sources as they are shown in Fig. 4.

The positive outputs are connected to the terminals 1, 3, 5 and 7 of the IO Connector. The remaining terminals 2, 4, 6, 8 are connected to ground.

### 2.2.2.2 2 Floating Voltage Outputs


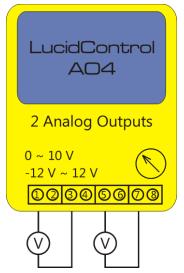


Fig. 5 Symmetrical Voltage Outputs

All 4 voltage outputs share a common ground. A floating output can be achieved by connecting the outputs as shown in Fig. 5. In the picture two of the 4 independent voltage sources are connected in series.

Voltage output modules providing positive and negative voltages e.g. LCTR-AO4-12-S are able to double their output voltage. By connecting this module as shown in Fig. 5 can create voltages in the range of -24V to +24V.


### 2.2.2.3 Current Outputs

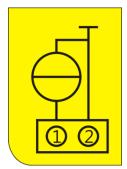

The current output module shown in Fig. 3 consists of 4 independent current sources as they are shown in Fig. 6.

The positive outputs are connected to the terminals 1, 3, 5 and 7 of the IO Connector. The remaining terminals 2, 4, 6, 8 are connected to ground.

Fig. 6 Current Source

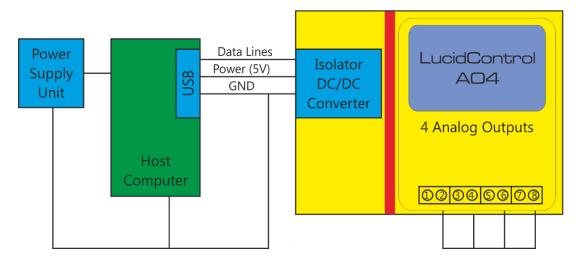

# 2.3 Isolation of USB Interface (-ISO option)

#### Fig. 7 AO4 Module with isolated USB Interface

AO4 module is optionally available with isolated USB interface (-ISO option). Fig. 7 shows the AO4 module with isolated USB interface.

The isolation consists of a galvanic barrier (red area) that isolates the IO module entirely from the USB data lines and power supply lines. An isolated DC/DC converter separates the power supply.

The main purpose of the isolated LucidControl module is the separation of the IO module from the data processing equipment (e.g. the host computer). Non-Isolated IO modules are conductive connected to the USB port also sharing a common ground line.

Harsh or noisy environments (e.g. with disturbances or long cables) may cause measurement errors or malfunction of the data processing equipment or the IO module caused by ground loops. This can be solved by the isolation of the USB port.

Another aspect is the protection of the data processing equipment from overvoltage. If for example a voltage above the limits of the module is applied to the terminals this can damage the module and the data processing equipment also.

The isolation limits the possible damage to the IO module itself.

USB isolation can be an option if a higher protection level required or if LucidControl IO modules are operating in harsh environments.



Even when the isolation protects the data processing equipment from overvoltage damage it does not protect from voltages > 50V!

# 2.4 Setup of Hard- and Software

Setting up LucidControl hardware is extremely easy:

- 1 Ensure that no signal is applied to the IO Connector
- 2 Connect LucidControl via USB with the computer
- 3 <u>Applies for Microsoft windows only</u>: The system asks for an installation file. This is not a driver but only an information file (INF). The file can be downloaded from our website <u>www.lucid-control.com/downloads</u>
- 4 That's all. LucidControl switches the green power LED on and the module is ready for usage.

# 2.4.1 Windows

As mentioned the installation under Microsoft Windows requires the information file.

After finished installation the Windows Device Manager contains a new serial port (COM). The module can be accessed using this port.

Note:

Even if more than one module is connected to a computer Windows ensures that the <u>same</u> serial port number is assigned to the module(s) after restart.

# 2.4.2 Linux

Despite to Windows installation under Linux the module is usable immediately after connection without any additional steps. Linux installs /dev/ttyACM devices for any module connected to the computer.

Note:

By default Linux cannot ensure that the same /dev/ttyACM device is assigned to the same module on restart. But as long as <u>only one</u> module is connected to the computer it is ensured that it is accessible via /dev/ttyACM0.

This problem can be solved by the LucidIoCtrl command line tool which can create static devices always pointing to a specific module. Moreover the device can be given useful names e.g. dev/digitalIoKitchen.

# 2.4.3 Get command line LucidIoCtrl

LucidIoCtrl command line tool can be downloaded from our website:

www.lucid-control.com/downloads

This page provides the command line tool LucidIoCtrl for different architectures.

After downloading the program can be stored in a folder of choice.

Please see the section 3 of the general LucidControl User Manual for more information about this helpful tool.

# 2.4.4 Ready to Start

After the module was installed successfully (if it was necessary at all) the green Power LED is switched on signaling that the module is ready for use.

Since the module was preconfigured for standard output mode, it can be used without further configuration. The following examples demonstrate the functionality of the module by using the LucidIoCtrl command line tool.

The following examples demonstrate the functionality of the module by using the LucidIoCtrl command line tool.

Windows Examples:

For all examples it is assumed that the module is connected to COM1.

```
Set the values of all 4 voltage output channels. Value of CH0 = 5.000 V, CH1 = 2.500 V,
CH2 = 1.250 V, CH3 = 0.625 V
LucidIoCtrl -dCOM1 -tV -c0,1,2,3 -w5.000,2.500,1.250,0.625 [ENTER]
```

Set the values of all 4 current output channels. Value of CH0 = 5.000 mA, CH1 = 2.500 mA, CH2 = 1.250 mA, CH3 = 0.625 mA

LucidIoCtrl -dCOM1 -tC -c0,1,2,3 -w5.000,2.500,1.250,0.625 [ENTER]


#### Linux Examples: For all examples it is assumed that the module is connected to /dev/ttyACM0.

Set the values of all 4 output channels. Value of CH0 = 5.000 V, CH1 = 2.500 V, CH2 = 1.250 V. CH3 = 0.625 V LucidloCtrl -d/dev/ttyACM0 -tV -c0,1,2,3 -w5.000,2.500,1.250,0.625 [ENTER] Set the values of all 4 current output channels. Value of CH0 = 5.000 mA, CH1 = 2.500 mA, CH2 = 1.250 mA, CH3 = 0.625 mA

LucidIoCtrl -d/dev/ttyACM0 -tC -c0,1,2,3 -w5.000,2.500,1.250,0.625 [ENTER]

# 3 Module Operation

The LucidControl AO4 Analog Output Module generates 4 independent output voltage or current signals.

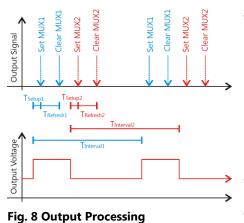

The Hardware of the AO4 module consists of 2 independent DAC (Digital Analog Converter). By multiplexing each DAC, 4 output voltages or currents are created in total.

Fig. 8 illustrates the output processing in standard mode. Each of the two DAC is responsible for the generation of two analog output signals.

The processing of both DAC channels is operating in parallel the same way. For simplicity only the processing

of one DAC is shown in Fig. 8.

The lower diagram in Fig. 8 shows the DAC output signals – a higher for output 1, a lower voltage for output 2.

The upper diagram depicts the timing sequence of the output multiplexing and refreshing algorithm for each DAC.

After the DAC set the updated voltage of output 1 and  $T_{Setup}$  has passed the output multiplexer applies the signals to the output circuit.  $T_{Setup}$  is a guard time preventing to overwrite the stable voltage of the last refresh cycle.

The voltage is applied to the output circuit for the time  $T_{Refresh}$ . After refreshing has completed, the DAC generates the updated signals of output 2. Output 2 is processed the same way as output 1 was.

The refreshing algorithm repeats periodically after T<sub>Interval</sub> has passed.

Even if T<sub>Setup</sub>, T<sub>Refresh</sub> and T<sub>Interval</sub> can be adjusted for each output channel independently, this should only be taken into account if it is necessary since changing these parameters may have unexpected consequences like skipped output channels or high voltage ripple. The relevant IO Configuration Parameters are *outAnSetupTime* (see 3.4.5), *outAnRefreshTime* (see 3.4.4) and *outAnRefreshInterval* (see 3.4.3).

At any time it is possible to restore the default values of changed parameters.

# 3.1 Operation Modes

# 3.1.1 Inactive Mode

Setting an output to inactive mode disables processing of the output and sets the output voltage to minimum value (e.g. 0 V).

Setting an output to Inactive Mode does not suspend the output processing and refreshing but forces the output voltage to minimum value.

# 3.1.2 Standard Mode

In standard mode the processing of the analog output is executed as described in section 3.

# 3.2 Offset Compensation

In some cases it is necessary to compensate an offset signal by adding a value to the output voltage or current.

The signed value of the IO Configuration Parameter *outAnOffset* (see 3.4.6) is added to the output signal and allows an offset correction.

# 3.3 Commands

Accessing inputs and outputs is a very common task which is mostly identical for all LucidControl modules. For this task output modules provide the commands SetIo for writing a single value and SetIoGroup for writing a group of values of the same type.

The command GetIo supports reading of the state of a single output value while GetIoGroup reads a group of output values of the same type.

For more comprehensive information covering reading and writing of inputs and outputs please see the sections 3.2.1.1, 3.2.1.2 and 4.3 of the general LucidControl manual.

The following sections describe in detail the commands which are supported by the AO4 module.

# 3.3.1 SetIo

This command sets the output signal of one output channel.

Command	SetIo	Access	Write		
Opcode	0x40				
LucidIoControl Command Line Tool					
Call (-tV)		-c[Channel] -tV -w[Vo -c[Channel] -tC -w[Cu	5 -		

Note:

When using the LucidIoCtrl command line tool, the distinction between the SetIo and SetIoGroup commands is not necessary since LucidIoCtrl command line tool handles this automatically.

LucidIoCtrl Command Line Tool Example Set output channel 0 to 2.540 V: LucidIoCtrl -dCOM4 -c0 -tV -w2.540 [ENTER] Set output channel 0 to 10 mA: LucidIoCtrl -dCOM4 -c0 -tC -w10 [ENTER]

Request Frame

OPC	P1	P2	LEN	Data Field
0x40	Channel	Value Type	Length	Value

Value	Description							
Channel	Number of input or output channel (Range: 0 ~ 3)							
Value Type	Value Type							
	Supported Value Types							
	Value Type	Value Range	Length					
	Signed Voltage	Signed Voltage -100,000,000 µV ~						
	Resolution 1 µV	4 Bytes						
	(0x1D)							
	Signed Voltage -30,000 mV ~							
	Resolution 1 mV 30,000 mV 2 Bytes							
	(0x1C) (-30 V ~ 30 V)							
	Signed Current -1,000,000,000 nA							
	Resolution 1nA	~	1 Putor					
	(0x23)	1,000,000,000 nA	4 Bytes					
	(-1 A ~ 1A)							
Length	Length of the Values in the Data Field							
Value	Values accordingly to the	/alue Type						

Tab. 3 SetIo Request

Response Frame

Status	Length
Status	0

The command does not return any data. In the case of an error the command returns Execution Status Code documented in section 4.4 of the LucidControl User Manual.

# 3.3.2 SetIoGroup

This command sets the voltage or current of a group of output channels of the same Value Type.

Command	SetIoGroup	Access	Write					
Opcode	0x42							
	LucidIoControl Command Line Tool							
Call (-tV)		-c[Channels] -tV -w[V -c[Channels] -tC -w[C	2 -					
	<u>Channels:</u> Comma separated list o	of channels e.g. –c0,2,3						
	Values: Comma separated list o	of voltages or currents to	o set e.g. –w1.25,2.5,7.5					

#### LucidIoCtrl Command Line Tool Example

Set output channel 0 to 1.25 V, output channel 2 to 2.50 V and output channel 3 to 7.50: LucidIoCtrl -dCOM4 -c0,2,3 -tV -w1.25,2.5,7.5 [ENTER]

Set output channel 0 to 5 mA, output channel 2 to 15.5 mA and output channel 3 to 20: LucidIoCtrl -dCOM4 -c0,2,3 -tC -w5,15.5,20 [ENTER]

Request Frame:

OPC	P1	P2	LEN	Data Field
0x40	Channel Mask	Value Type	Length	Value(s)

Value	Description						
	Channel Mask						
	Specifies the output channels to access						
	Channel	<b>Bit Position</b>	Value				
	0	0	0x01				
	1	1	0x02				
Channel	2	2	0x04				
Mask	3	3	0x08				
	Values are bit	wise or combir	ned				
	Examples:						
	Accessing channel 0 and 3 Value = 0x01 OR 0x08 = 0x09						
	Accessing channel 1 and 2 Value = 0x02 OR 0x04 = 0x06						
	Value Type						
	Supported Va						
	Value Type		Value Range	Length			
	Signed	•	-100,000,000 µV				
	Resolution	•	100,000,000 µV	4 Bytes			
Value	(0x1		(-100 V ~ 100 V)				
Туре	Signed	•	-30,000 mV ~				
51	Resolutio		30,000 mV	2 Bytes			
	(0x2		(-30 V ~ 30 V)				
	Signed		-1,000,000,000 nA	4			
	Resoluti	-	~	4 Bytes			
	(0x2	23)	1,000,000,000 nA				
			(-1 A ~ 1A)				
Length	Length of the Values in the Data Field (One Value for each channel)						
Values	One or more	alues to set in	ascending channe	el order			

Tab. 4 SetIoGroup Request

#### Response Frame

Status	Length
Status	0

The command does not return any data. In the case of an error the command returns Execution Status Code documented in section 4.4 of the LucidControl User Manual.

#### Example of SetIoGroup

The following request frame sets outputs 0 to 1.25 V and output 1 to 2.5 V.

#### Request Frame

OPC	P1	P2	LEN	Data Field							
							Ву	te			
0x42	0x03	0x1D	0x08	Value Output 0 Value Output 1			1				
				0	1	2	3	4	5	6	7
				0xD0	0x12	0x13	0x00	0xA0	0x25	0x26	0x00

Channel Mask for Param1: Output Values in Data Field are sorted: 0x01 OR 0x02 = 0x03Channel 0, Channel 1

#### Response Frame:

Status	Length
0x00	0x00

### 3.3.3 GetIo

This command reads the voltage or current of the analog output.

Command	GetIo		Ac	cess	Read
Opcode	0x46				
	Lu	cidIoContro	ol Comman	d Line Tool	
Call (-tL)	LucidIoCtrl -d[COMx] -c[Channel] -tV -r LucidIoCtrl -d[COMx] -c[Channel] -tC -r				
Return	CHn:VV				
	n	Output Cha	annel		
	VV	Output Val	ue		

<u>Note</u>

When using the LucidIoCtrl command line tool the distinction between GetIo and GetIoGroup commands is not necessary since the program handles this automatically.

LucidIoCtrl Command Line Tool Example

```
Read voltage of output channel 0
    LucidIoCtrl -dCOM4 -c0 -tV -r [ENTER]
-> CH0:5.00000
Read current of output channel 0
    LucidIoCtrl -dCOM4 -c0 -tC -r [ENTER]
-> CH0:5.00000
```

#### Request Frame

OPC	P1	P2	LEN
0x46	Channel	Value Type	0

Value	Description				
Channel	Number of input or output	ut channel (Range: 0 ~ 3)			
Value Type	Supported Value Types				
	Value Type	Value Range	Length		
	Signed Voltage	-100,000,000 μV ~			
	Resolution 1 µV	100,000,000 μV	4 Bytes		
	(0x1D)	(-100 V ~ 100 V)			
	Signed Voltage	-30,000 mV ~			
	Resolution 1 mV	30,000 mV	2 Bytes		
	(0x1C)	(-30 V ~ 30 V)	-		
	Signed Current	-1,000,000,000 nA			
	Resolution 1nA	~	4 Dutes		
	(0x23)	1,000,000,000 nA	4 Bytes		
		(-1 A ~ 1A)			

Tab. 5 GetIo Request

Response Frame:

In case of successful execution the command returns the value of the specified channel number.

Status	LEN	Data Field
Status	Length	Value

In the case of an error the command returns Execution Status Code documented in section 4.4 of the LucidControl User Manual.

# 3.3.4 GetIoGroup

This command reads the voltage or currents of a group of analog outputs of the same Value Type.

Command	GetIoGroup	Acce	ess		Read	
Opcode	0x48					
	LucidIoControl Command Line Tool					
Call (-tV)	LucidIoCtrl	-d[COMx] -c[C -d[COMx] -c[C ated list of cha	hannels]	-tC -r		
Return	CHn:VV n In	sorted from lov put Channel utput Value	wer to hig	gher chanr	nels	

#### LucidIoCtrl Command Line Tool Example

Read output voltages of channel 0, 1 and 3: LucidIoCtrl -dCOM4 -c0,1,3 -tV -r [ENTER] -> CH0:1.25000 CH1:2.50000 CH3:5.00000

- Read output cuttents of channel 0, 1 and 3:
- LucidIoCtrl -dCOM4 -c0,1,3 -tC -r [ENTER]
- -> CH0:1.25000 CH1:2.50000 CH3:5.00000

#### Request Frame

OPC	P1	P2	LEN
0x48	Channel Mask	Value Type	0

Value			Description		
	Channel Mask	<u> </u>			
	Specifies the o	output channel	s to access		
	Channel	<b>Bit Position</b>	Value		
	0	0	0x01		
	1	1	0x02		
Channel	2	2	0x04		
Mask	3	3	0x08		
	Values are bit	wise or combir	ned		
	Examples:				
	Accessing channel 0 and 3 Value = 0x01 OR 0x08 = 0x09				
	Accessing channel 1 and 2 Value = $0x02 \text{ OR } 0x04 = 0x06$				
	Supported Va	lue Types			
	Value	Туре	Value Range	Length	
	Signed V	Voltage	-100,000,000 $\mu V$ $\sim$		
	Resoluti	on 1 µV	100,000,000 µV	4 Bytes	
	(0x2	LD)	(-100 V ~ 100 V)		
Value	Signed V	Voltage	-30,000 mV ~		
Туре	Resolutio	on 1 mV	30,000 mV	2 Bytes	
	(0x2	1C)	(-30 V ~ 30 V)		
	Signed	Current	-1,000,000,000 nA		
	Resoluti	on 1nA	~	4 Bytes	
	(0x2	23)	1,000,000,000 nA	4 Dytes	
			(-1 A ~ 1A)		

Tab. 6 GetIoGroup Request

Response Frame:

In case of successful execution the command returns the read values of the channels specified in the Channel Mask.

Status	LEN	Data Field
Status	Length	Value(s)

In the case of an error the command returns Execution Status Code documented in section 4.4 of the LucidControl User Manual.

#### Example of GetIoGroup Request:

The following request frame reads outputs 0 and 1. It returns the output voltages as signed 4 byte result.

Opcode	P1	P2	Length
0x48	0x03	0x1D	0x00

Channel Mask (P1):

0x01 OR 0x02 = 0x03

**Response Frame:** 

Output 0 = 1.25 V, output 1 = 2.50 V. Values in Data Field are in ascending channel order.

Heade	r Field	Data Field							
Status	LEN								
		Bytes							
			Value 0				Value 0 Value 1		
0x00	0x08	0	1	2	3	4	5	6	7
		0xD0	0x12	0x13	0x00	0xA0	0x25	0x25	0x00

#### 3.4 Parameters

LucidControl IO modules can be configured by a set of System Configuration Parameters ans IO Configuration Parameters.

The Parameters are accessible via the SetParam and GetParam command which are described in sections 4.3.5 and 4.3.6 of the LucidControl User Manual.

### 3.4.1 outAnValue

This IO Configuration Parameter represents the voltage or current value of the analog output.

Parameter	outAnValue	Access	Read / Write			
Address	0x1000					
Values	Voltage in 1 µV resolut	ion				
Default Value	0	Parameter Type	4 bytes signed			
LucidIoCtrl Commar	id Line Tool					
Parameter Name	outAnValue	Parameter Values	-100,000,000 μV ~ 100,000,000 μV or -1,000,000 μA ~ 1,000,000 μA			
Call (Set)	LucidIoCtrl -d[COMx] {default}	-c[Channel] -soutAn	Value[=Value] {-p}			
Call (Get)	LucidIoCtrl -d[COMx]	-c[Channel] -goutAny	Value			

LucidIoCtrl Command Line Tool Example Set output voltage of channel 0 to 5 V and make the setting persistent. LucidIoCtrl -dCOM4 -c0 -soutAnValue=5000000 -p [ENTER] Read output voltage of channel 0 (value is 5 V).

```
LucidIoCtrl -dCOM4 -c0 -goutAnValue [ENTER]
-> outAnValue=5000000
```

By using *outAnValue* an output value can be made persistent. In this case the stored voltage or current level is restored after a restart of the module.

Note:

For normal operation it is recommended to use the functions SetIo (see 0) and GetIo (3.3.3) in order to access the output channel value.

# 3.4.2 outAnMode

This IO Configuration Parameter configures the operation mode of the output.

Parameter	outAnMode		Access		Read / Write	
Address	0x1100	0x1100				
	Output Mode					
	Byte	Z	1ode			
Values	0x00	0x00 inactive				
	0x01	0x01 standard				
Default Value	standard		Paramete	r Type	1 byte unsigned	
LucidIoCtrl Comman	d Line Tool					
Parameter Name	outAnMode		Parameter Values		inactive / standard	
Call (Set)	LucidIoCtrl -d[COMx] -c[Chann {default}		el] -soutAni	Mode[=Mode] {-p}		
Call (Get)	LucidIoCtrl -	d[COMx]	-c[Channe	el] -goutAn	Mode	

#### LucidIoCtrl Command Line Tool Example

Set operation mode of output channel 0 to Standard Mode and make the setting persistent.

LucidIoCtrl -dCOM4 -c0 -soutAnMode=standard -p [ENTER]

Read the operation mode of input channel 0.

```
LucidIoCtrl -dCOM4 -c0 -goutAnMode [ENTER]
```

-> outAnMode=standard

# 3.4.3 outAnRefreshInterval

This IO Configuration Parameter configures the output refresh interval TInterval.

Parameter	outAnRefreshInterval	Access	Read / Write
Address	0x1111		
Values	T <sub>Interval</sub> in μs (micro seconds)		

	$5 \text{ ms} \le T_{\text{Interval}} \le 100 \text{ ms}$		
Default Value	10 ms	Parameter Type	4 bytes unsigned
LucidIoCtrl Commar	LucidIoCtrl Command Line Tool		
Parameter Name	outAnRefreshInterval <b>Parameter Values</b> Time [µs]		
Call (Set)	LucidIoCtrl -d[COMx] -c[Channel] -soutAnRefreshInterval[=Time] {-p} {default}		
Call (Get)	LucidIoCtrl -d[COMx] -c[Channel] -goutAnRefreshInterval		

#### LucidIoCtrl Command Line Tool Example

Set T<sub>Interval</sub> of output channel 0 to 20 ms and make the setting persistent. LucidIoCtrl -dCOM4 -c0 -soutAnRefreshInterval=20000 -p [ENTER]

Read T<sub>Interval</sub> parameter of input channel 0. LucidIoCtrl -dCOM4 -c0 -goutAnRefreshInteral[ENTER]

```
-> outAnRefreshInterval=20000
```

# 3.4.4 outAnRefreshTime

This IO Configuration Parameter configures the output refresh time T<sub>Refresh</sub>

Parameter	outAnRefreshTime	Access	Read / Write
Address	0x1113		
Values	T <sub>Refresh</sub> in µs (micro seco	onds)	
values	$0.1 \text{ ms} \le T_{\text{Refresh}} \le 10 \text{ m}$	IS	
Default Value	1 ms Parameter Type		4 bytes unsigned
LucidIoCtrl Commar	LucidIoCtrl Command Line Tool		
Parameter Name	outAnRefreshTime <b>Parameter Values</b> Time [µs]		Time [µs]
Call (Set)	LucidIoCtrl -d[COMx] -c[Channel]		
	-soutAnRefreshTime[=Value] {-p} {default}		
Call (Get)	LucidIoCtrl -d[COMx] -c[Channel] -goutAnRefreshTime		

#### LucidIoCtrl Command Line Tool Example

Set T<sub>Refresh</sub> of output channel 0 to 5 ms and make the setting persistent. LucidIoCtrl -dCOM4 -c0 -soutAnRefreshTime=5000 -p [ENTER]

```
Read T<sub>Refresh</sub> parameter of input channel 0
```

```
LucidIoCtrl -dCOM4 -c0 -goutAnRefreshTime[ENTER]
```

```
-> outAnRefreshTime=5000
```

# 3.4.5 outAnSetupTime

This IO Configuration Parameter configures the output refresh setup time T<sub>Setup</sub>.

Parameter	outAnSetupTime	Access	Read / Write	
Address	0x1112			
Values		$T_{\text{setup}}$ in µs (micro seconds) 0.1 ms $\leq T_{\text{Setup}} \leq 10$ ms		
Default Value	1 ms	Parameter Type	4 bytes unsigned	

LucidIoCtrl Command Line Tool				
Parameter Name	outAnSetupTime Parameter Values Time [µs]			
Call (Set)	LucidIoCtrl -d[COMx] -c[Channel] -soutAnSetupTime[=Value] {-p} {default}			
Call (Get)	LucidIoCtrl -d[COMx] -c[Channel] -goutAnSetupTime			

#### LucidIoCtrl Command Line Tool Example

Set  $T_{Setup}$  of output channel 0 to 1.5 ms and make the setting persistent.

```
LucidIoCtrl -dCOM4 -c0 -soutAnSetupTime=1500 -p [ENTER]
```

```
Read T<sub>Setup</sub> parameter of input channel 0
```

```
LucidIoCtrl -dCOM4 -c0 -goutAnSetupTime[ENTER]
```

```
-> outAnSetupTime=1500
```

# 3.4.6 outAnOffset

This IO Configuration Parameter configures the output offset compensation value which is described in section 3.2.

Parameter	outAnOffset	Access	Read / Write
Address	0x1120		
Values	Offset Compensation in	n 1 mV steps (-3 V ~ 3 <sup>v</sup>	V)
Values	Offset Compensation in	n 1µA steps (-3mA ~ 3r	nA)
Default Value	0 Parameter Type 2 bytes signed		
LucidIoCtrl Command Line Tool			
Parameter Name	outAnOffset	Parameter Values	Voltage [1 mV]
Parameter Name	outanonset	Parameter values	Current [1 µA]
Call (Set)	LucidIoCtrl -d[COMx] {default}	-c[Channel] -soutAnd	<pre>Dffset[=Value] {-p}</pre>
Call (Get)	LucidIoCtrl -d[COMx]	-c[Channel] -goutAnd	Offset

#### LucidIoCtrl Command Line Tool Example

Set output offset compensation value of output channel 0 to -5 mV and make the setting persistent.

LucidIoCtrl -dCOM4 -c0 -soutAnOffset=-5 -p [ENTER]

Read Offset Compensation value.

LucidIoCtrl -dCOM4 -c0 -goutAnOffset [ENTER]

-> outAnOffset=-5

# 4 Specification

Parameter	Condition	Va	lue
Outputs	1	•	
No of Output Channels			4
<b>Output - Electrical Characteristi</b>	ics		
Output Function		Digital to A	nalog Conversion
Resolution			12 bit
Base Accuracy			typ. ±0.25 %
			of full scale range
May Output Current	AO4-24	т	40 mA
Max. Output Current	Others	I <sub>TotalMax</sub>	160 mA
Output – Electrical Characterist	ics of Current	Outputs	
Max. Output Voltage		UC <sub>ChMax</sub>	10 V
Min. Output Comment 4)	AO4-20M4	т	4 mA
Min. Output Current <sup>4)</sup>	AO4-20M0	I <sub>ChMin</sub>	typ. 0.25 mA
Output Current Dependence	ce <sup>3)</sup>	R∟ not 500Ω	±0.5 %
<b>Output – Electrical Characterist</b>		Outputs	
Max. Output Current per	AO4-24		10 mA <sup>1)</sup>
Channel	Others	I <sub>ChMax</sub>	40 mA
	AO4-24	UchMin	50 mV
Min. Output Voltage <sup>2)</sup>	Others		See Note 2)
<b>Output – Timing Characteristic</b>		· · ·	
Value Update interval		T <sub>Update</sub>	typ. 10 ms
Setup Time for stable output	ut	T <sub>Stable</sub>	typ. 1 ms
DAC Conversion Time		T <sub>Conv</sub>	typ. 1 ms
Module – Communication			
USB		2.0 Full	Speed CDC Profil
Module – Electrical Characterist	tics		
Power Supply		USB Bus P	owered with +5V
		No additio	nal Power Supply
			needed.
Maximum Rated Supply Cu	rrent		250 mA
Module – Environment			
Temperature	Storage		-20 °C +70 °C
	Operation		0 °C +55 °C
Humidity		< 85 % RH,	non-condensing
Module – Housing			
Dimensions L x W x H		90 x 54 x 62 mm	
Weight (in total)			120 g
Assembly		Rail-Mount	(EN 50022, TS35)

	Protection Class (DIN 40050)	IP20
Mod	ule - Indicators	
	<ul> <li>Operation and Error Indicator</li> </ul>	
	<ul> <li>Communication Indicator</li> </ul>	
Soft	ware	
	Supported Operating Systems	Windows® XP, Windows® Vista,
		Windows® 7, Ubuntu, Debian,
		Raspbian
	Application Programming Interface	Console / Terminal Application,
	(API)	Java and Python

#### Notes:

- <sup>1)</sup> For currents > 2 mA an additional tolerance of max. 50 mV must be considered.
- <sup>2)</sup> If not further specified, the modules are able to drive the minimum output value within the specified tolerances.
  - The minimum value is 0V for non –S voltage modules.
- <sup>3)</sup> Outputs are calibrated to a base accuracy with  $500\Omega$  output resistors. For output resistances other than  $500\Omega$ , the Output Current Dependence applies.
- <sup>4)</sup> For AO4-20M0, a minimum saturation current must be considered.

# **5** Order Information and Accessories

General type number format LCTR-AO4-Range(-ISO)

Order Code	Product
LCTR-AO4-05	LucidControl Analog Output USB Module with 4
	channels 0 ~ 5 V
LCTR-AO4-10	LucidControl Analog Output USB Module with 4
LCTR-A04-10	channels 0 ~ 10 V
LCTR-AO4-12-S	LucidControl Analog Output USB Module with 4
LCTR-A04-12-3	channels ±12 V
LCTR-AO4-24	LucidControl Analog Output USB Module with 4
LCTR-A04-24	channels 0 ~ 24 V
LCTR-AO4-20M0	LucidControl Analog Output USB Module with 4
LCTR-A04-201010	channels 0 ~ 20 mA
LCTR-AO4-20M4	LucidControl Analog Input USB Module with 4
LCTK-A04-201014	channels 4 ~ 20 mA.

Order Code (ISO)	Product
-ISO	With galvanic isolation of USB Interface

The following accessories are available:

Order Code	Product
64.200.0005	Plug-In Terminal 8-way 1,5 mm <sup>2</sup> wire

# 6 Document Revision

Date	Rev.	
2019/09/16	1.4	<ul> <li>Added documentation of USB Isolation</li> </ul>

deciphe it GmbH Schäferstr. 5 87600 Kaufbeuren / Germany <u>www.lucid-control.com</u>



Page 26 of 26